

Board and Batten Installation Instructions

Figure 1


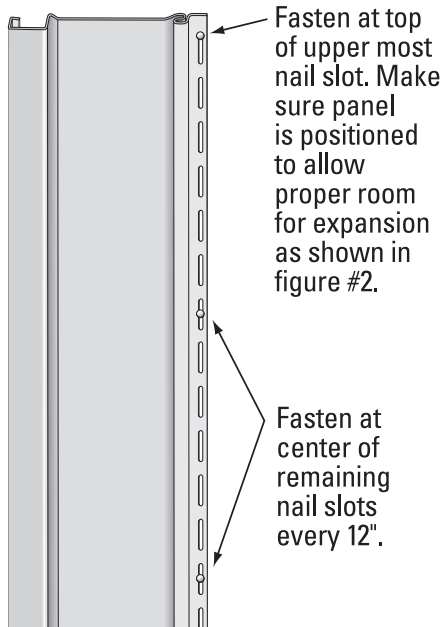


Figure 2



Also allow $\frac{1}{4}$ " clearance at each channel around windows, doors, and other obstacles.

Figure 3

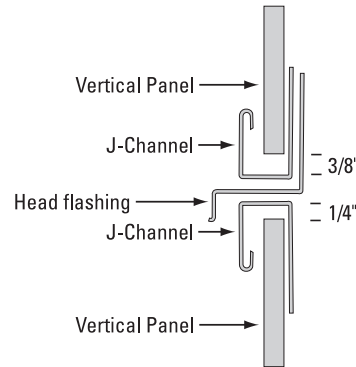

DO NOT nail tight against wall. Leave $\frac{1}{32}$ " to $\frac{1}{16}$ " clearance.